



[www.naturkind.com](http://www.naturkind.com)



# Hard Carrycot Max

Operating and Cleaning Instructions Version 1.0 EN



## Dear parents!

We are pleased that you have opted for a Naturkind hard carrycot! As manufacturers, we have a strong sense of responsibility and are consistently committed to achieving our goal: To develop and produce strollers that your baby truly feels comfortable in and that assure your child a good and healthy start in life.

All our efforts are focused on creating a cozy first "living space" for your baby, with loving attention to detail and the finest materials we can find. This is our aim, and we pursue it with love, great sensitivity and a sense of responsibility. It is important to us to equip every single Naturkind hard carrycot with our philosophy.

We thank you for the trust you have placed in us and hope you have a lot of fun with your new Naturkind hard carrycot.

Peter Doppler, Naturkind-Founder

# Contents

1. Delivery Contents .....	4
2. Warnings and Compatibility .....	4
2.1 Warnings .....	4
2.2 Compatibility of Naturkind products with Naturkind frames .....	6
3. Operation .....	7
3.1 Assembling and folding the hard carrycot .....	7
3.2 Adjusting the backrest .....	8
3.3 Attaching the hard carrycot to the frame .....	9
3.4 Removing the hard carrycot from the frame .....	9
3.5 Using the swing function .....	10
3.6 Unfolding and folding the roof .....	10
3.7 Integrated ventilation net .....	11
4. Care .....	11
5. Guarantee .....	12
5.1 Provisions .....	12
5.2 Examples .....	13



max 15 kg

## WARNING!

This hard carrycot is only suitable for children who cannot sit upright unaided, roll over or lean on their hands or knees. Maximum weight of the child 15 kg.

# 1. Delivery Contents

1 piece hard carrycot including roof  
1 piece mattress cover  
1 piece lateral cloth lining  
1 piece coco-latex mattress  
2 pieces fixation belts  
1 piece instructions hard carrycot Max

**IMPORTANT!** Keep these instructions for future reference and read them carefully before use.

## 2. Warnings and Compatibility

### 2.1 Warnings

Please read these instructions carefully before you use your hard carrycot and follow the instructions to assure maximum security for your child, so you can enjoy your hard carrycot for a long time.

Read the following information and warnings carefully before use and keep the instructions for future reference. If you do not observe the information and warnings mentioned here, it could have an effect on your child's safety. Please explain the exact operation to everyone who uses your hard carrycot!

## WARNING!

- ! Never leave your child unattended!
- ! The hard carrycot is only suitable for children who are not yet able to sit upright unaided.
- ! Do not let other children play unsupervised near the hard carrycot.
- ! Only carry your baby with a closed cover.
- ! Note the risks that may arise from open fire and other heat sources like electric heaters, gas bottles, etc. if they are in close proximity to the hard carrycot.
- ! Before use, check whether the hard carrycot is damaged or parts are torn or broken – if they are, do not use the hard carrycot!
- ! The maximum weight of the child may not exceed 15 kg.
- ! Never use this hard carrycot on a stand. Only place this hard carrycot on dry, solid and firm underground.
- ! For safety reasons, only use original accessories and spare parts provided by Naturkind.
- ! Do not place an additional mattress in the stroller.
- ! You yourself are responsible for your child's safety.
- ! Only carry the hard carrycot by its handle. Make sure that the roof is engaged in a vertical position. Carry the hard carrycot in a way that enables your baby to be in a horizontal position.
- ! It is important to check whether your hard carrycot is properly engaged before use.
- ! Strollers, sports strollers, and hard carrycots are no replacements for beds and may only be used for the transportation of your child.
- ! Be careful with the hard carrycot, e.g. when putting it down or when passing through a door to avoid shocks to your baby.
- ! Do not place the baby basket near any other product that could cause a strangulation hazard, e.g. cords, blind/curtain cords, etc.
- ! Pay attention to an appropriate body temperature through correct clothing of your child in the hard carrycot. Otherwise there is the danger of a life-threatening overheating.
- ! Only place the hard carrycot on the floor. Never on raised surfaces. Danger of falling!
- ! Seek medical advice if you are unsure about the safety of your baby's sleep while using the product.
- ! This seating unit is not suitable for children under six months.
- ! Always use the restraint system as soon as you put the backrest up.
- ! In order to prevent your child from suffocating, keep small objects, toys and cushions away from your child.

**IMPORTANT! If you fail to observe this, we cannot accept any liability for accidents! Subject to technical modifications.**

## 2.2 Compatibility of Naturkind products with Naturkind frame

	Lux Evo	Varius Pro	Ida
Hard carrycot Max	✓		✓

**WARNING!**

Never use combinations of Naturkind products and Naturkind frames that are incompatible with one another!

## 3. Operation

### 3.1 Assembling and folding the hard carrycot



To assemble the hard carrycot, please proceed as follows:

1. Remove the mattress from the folded hard carrycot.
2. Two metal brackets will appear: one in the foot area and one in the head area. Push the metal bracket in the foot area outwards for the carrycot to set itself up.
3. Afterwards, the metal bracket in the head area is pushed behind the backrest. For this purpose, lift the backrest and fold it backwards so you can place the metal bracket behind it.
4. Push both metal brackets outward until the carrycot has completely set itself up and the metal brackets have engaged in the metal anchoring.
5. Fold the backrest forward towards the head area again.
6. Put the mattress back into the carrycot.

In order to fold the hard carrycot, proceed in reverse order.

## 3.2 Adjusting the backrest



To adjust the backrest to one of the three possible upright positions, proceed as follows:

1. Remove the mattress from the carrycot that has set itself up if necessary.  
The adjustable backrest will appear in the head area of the carrycot.
2. To bring the backrest into one of the three upright positions, engage the black bracket in one of the three hooks on the back side of the backrest as illustrated.
3. Put the mattress back into the carrycot by pulling the head area of the mattress over the backrest.

To bring the backrest into a horizontal position, lift the black bracket on the back side of the backrest upward before laying the backrest on the base of the carrycot.

### **WARNING!**

Use a safety belt as soon as your child can sit upright unaided.


The sitting position is not suitable for children under the age of 6 months.



### 3.3 Attaching the hard carrycot to the frame



1. Activate the parking brake (see operating instructions of your stroller).
2. Lift up the hard carrycot and place the pivots (3) that are located on both sides of the hard carrycot in the provided receivers (4) on the frame.
3. Push the seating unit or the hard carrycot with the pins into the receivers until the pins engage in the receivers.
4. Secure the hard carrycot with the fastening belt in the front (5) and rear (6) area by closing the belt and tightening it.

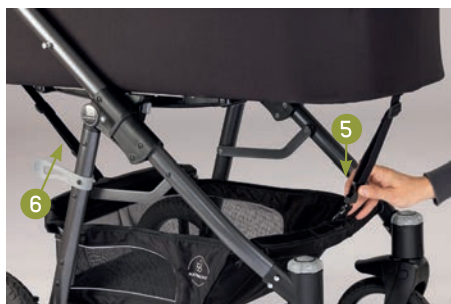

#### WARNING!

Before use, make sure that the hard carrycot is properly engaged.

### 3.4 Removing the hard carrycot from the frame



1. Activate the parking brake (see operating instructions of your stroller).
2. Open the two fastening belts.
3. Press the light gray push button (5) on one side of the mounting device.
4. Repeat this on the other side of the stroller.
5. Remove the hard carrycot.

## 3.5 Using the swing function



If you set the hard carrycot on the ground, you can use the swing function.

To activate this function, fold the four plastic supports (6) of the hard carrycot as depicted for the two lower ones.

To deactivate this function, unfold the four plastic supports as depicted for the two upper ones.

### WARNING!

Only set this hard carrycot down on a dry, firm and even surface.

## 3.6 Unfolding and folding the roof



To unfold the roof of the hard carrycot:

1. Push the button (7) on the roof joint and pull the roof with the cork handle towards the cover.
2. If you release the button (7) while you are pulling the cork handle, the roof engages in intermediate positions.
3. If you hold down the button until the roof has completely unfolded, you unfold the roof without engaging in intermediate positions.

To fold the roof of the hard carrycot:

1. Push the button (7) on the roof joint to trigger the locking mechanism of the roof. Then pull the cork handle on the roof towards the head section.
2. If you release the button (7) while you are pulling the cork handle, the roof engages

- in intermediate positions. If you hold down the button until the roof has completely unfolded, you unfold the roof without engaging in intermediate positions.
3. Fold the roof.

## 3.7 Integrated ventilation net



To prevent heat accumulation at warm temperatures, you can use the integrated zipper on the roof of the baby basket. Below there is an integrated ventilation net.

## 4. Care

All cotton fabrics come from controlled organic cultivation and are dyed on a natural basis. This natural fiber is more sensitive than synthetic fiber and is therefore quicker to bleach.

Please be sure to observe the following care instructions for the fabrics. Otherwise, the virgin sheep's wool that is used as filling material may become felted, exit the material or become unevenly distributed.

- ! Clean small stains carefully with a damp towel and clear water. Please avoid rubbing or scratching!
- ! All removable pieces of fabric can be washed with liquid heavy-duty detergents in the washing machine at a maximum water temperature of 30 °C with a wool program.
- ! Do not use detergents with optical brighteners – they can change or destroy the color particles.
- ! Turn the spin-dry function off (no spin-drying, no final spin) and avoid wringing out the fabric parts after washing.
- ! Turn the fabric pieces inside out and use a laundry net. Fill the drum of the washing machine only one third.
- ! Only let the fabric parts air-dry and, as far as possible, let them dry in the shade. Never use a dryer.
- ! Shake the dried fabric parts to fluff up the virgin sheep's wool.

The dyed fabrics exhibit the following light fastness and abrasion resistance:

fabrics	light fastness	abrasion resistance	
		dry	wet
light organic cotton colors	3 bis 4	3	2
dark organic cotton colors	3 bis 4	2	2

Please note that higher ozone levels have a negative effect on the color fastness of the fabrics. Because fabrics also react sensitively to solar radiation, we recommend to keep the stroller away from the blazing sun.

## 5. Guarantee

### 5.1 Provisions

You have a guarantee claim within a period of two years for this carrycot. The period starts with the delivery of the product by the distributor. Please keep your receipt as proof; a complaint cannot be processed without an invoice. The guarantee concerns all defects in material and workmanship that are present at the time the product is delivered.

**The guarantee does not cover the following points:**

- wear marks
- consequences of improper use
- consequences of excessive use or load
- consequences of incorrect assembly or repair
- consequences of careless handling or a lack of care and maintenance
- consequential damages that result from smaller, disregarded damages or defects
- consequences of improper or independent repairs or changes of the product without prior approval of Naturkind

## 5.2 Examples

**None of the following examples are guarantee claims:**

- Color differences cannot always be avoided during production and do not constitute a reason for complaint.
- The fading or lighter edges of textiles do not constitute a material defect, they are a result of normal wear and tear.
- Mechanical effects, such as friction or rubbing or improper use, that create holes or rubbing spots in the material.
- If the carrycot textiles are washed correctly, the material, and the sheep's wool, do not change! Please be sure to observe the washing instructions in the care instructions carefully. If the fabric cover exhibits the following defects after washing, this is clearly due to improper washing and does not fall under the guarantee:
  - shrinking of fabric cover
  - wool is felted
  - wool has penetrated the material
  - the wool is no longer evenly distributed in the cover
- Wool and material are matched with one another, so that the wool hardly penetrates the material under normal use. However, it is natural for wool fibers to penetrate the material under normal use, due to mechanical wear. You can simply remove these fibers with a clothes brush.
- Tearing of the seams or push buttons: When purchasing your stroller, please check whether all fabrics have been properly sewn and whether the push buttons are securely fixed. In the event of a claim, we kindly ask you to submit your claim immediately within a period of two weeks. Claims that are made later than one month after your child's birthday cannot be accepted and are regarded as a result of wear.



## Out of love. Naturally.

This Naturkind hard carrycot is made of pure natural materials. Cotton from controlled organic cultivation (kbA) for the fabric parts, pure organic virgin sheep's wool from controlled organic livestock (kbT) for the filling. Every Naturkind hard carrycot is manufactured for you by hand!



organic  
wool fleece



organic  
cotton



wood



cork



coconut  
fibre

Our models comply with the Euro standards „EN 1888-2:2019“ and „EN 1466:2015“.